

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. These preferences can be changed by using the “DISP” button, by using the Remote Touch, or at your Lexus dealer.

Customizing vehicle features


■ Changing by using the Remote Touch

- ▶ Vehicles without a navigation system

1 “Vehicle Settings” screen displayed on the Remote Touch screen.
(→P. 358)

2 Select “Vehicle Customization” on the “Vehicle Settings” screen.

“Vehicle Customization” screen will appear.

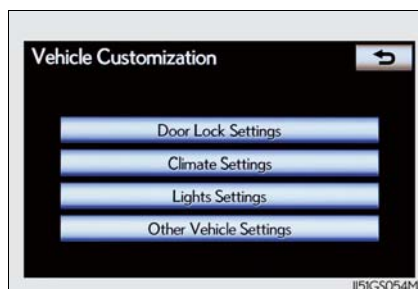

3 Choose a category displayed on the screen to display the settings.

4 Select the setting to be changed. Change each setting.

For items that can be enabled/disabled, and for items with an operating time that can be changed, select “On” or “Off”, or select the desired operating time.

For items with sensor sensitivity that can be changed, select “+” or “-” to choose the desired level, then select “OK”.

5 A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

- ▶ Vehicles with a navigation system
 - Refer to “Navigation System Owner’s Manual”.
- **Changing by using the “DISP” button**
 - P. 96

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- ① Settings that can be changed using the Remote Touch
- ② Settings that can be changed using the “DISP” button
- ③ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

Item	Function	Default setting	Customized setting	①	②	③
Multi-information display (→P. 91)	Language	American English	French	–	○	○
			Spanish	–	○	○
	Units*2	miles (MPG)	km (km/L)	–	○	○
			km (L/100km)	–	○	○
	ECO lamp	ON (Self-lighting)	OFF	–	○	○
			ON (Always)	–	○	○
	Drive monitor	Cruising range	Fuel consumption	–	○	○
	Lamp brightness	Standard	Bright	–	○	○
	SPORT lamp	ON	OFF	–	○	○
	Background screen	ON	OFF	–	○	○
	Default settings	OFF	ON	–	○	○

Item	Function	Default setting	Customized setting	①	②	③
Door lock (→P. 124, 834)	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	O	–	O
	Speed-detecting automatic door lock function	Off	On	O	–	O
	Shifting gears to position other than P locks all doors.	On	Off	O	–	O
	Shifting gears to P unlocks all doors.	On	Off	O	–	O
	Opening driver's door unlocks all doors.	Off	On	O	–	O
Smart access system with push-button start (→P. 105) and wireless remote control (→P. 120)	Operation buzzer volume	7	Off	O	–	O
			1 to 6			
	Operational signal (Emergency flashers)	On	Off	O	–	O
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off	O	–	O
			30 seconds			
	Open door warning buzzer	On	Off	–	–	O

Item	Function	Default setting	Customized setting	①	②	③
Smart access system with push-button start (→P. 105)	Smart access system with push-button start	On	Off	○	–	○
	Smart door unlocking	Driver's door	All the doors	○	–	○
			Each door			
			Same side doors			
	Welcome light illumination control	On	Off	–	–	○
Wireless remote control (→P. 120)	Wireless remote control	On	Off	–	–	○
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	○	–	○
	Trunk unlocking operation	One long press	One short press	–	–	○
			Push twice			
			Off			
Front seats (→P. 135)	Driver's seat movement when exiting the vehicle	Standard	Off	○	–	○
			Partial			
	Driver's seat lumbar support movement when exiting the vehicle	On	Off	○	–	○
	Front passenger's seat lumbar support firmness adjustment when exiting the vehicle	On	Off	–	–	○

Item	Function	Default setting	Customized setting	①	②	③
Front seats (→P.135)	Upward movement of entire front passenger seat during stowage when the seat is stowed by using the front passenger seat operation AUTO switch on front console or the front passenger seat operation AUTO button on the rear armrest*1	On	Off	–	–	O

Item	Function	Default setting	Customized setting	①	②	③
Power windows (→P. 173) and moon roof (→P. 176)	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off	–	–	○
	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off	–	–	○
	Mechanical key linked operation	On	Off	–	–	○
	Wireless remote control linked operation	Off	On (Open only)	–	–	○
	Linked entry function	On	Off	–	–	○

Item	Function	Default setting	Customized setting	①	②	③
Turn signal lever (→P. 218)	Times of flashing of the lane change signal flashers	3	5	○	-	○
			7			
			9			
			11			
			Off			
Automatic light control system (→P. 225)	Light sensor sensitivity	Standard	-2 to 2	○	-	○
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	Off	○	-	○
			60 seconds			
			90 seconds			
AFS (Adaptive Front-lighting System) (→P. 226)	Adaptive Front-lighting System	On	Off	-	-	○
Lights (→P. 225)	Daytime running light system ^{*3}	On	Off	○	-	○

Item	Function	Default setting	Customized setting	①	②	③
Intuitive parking assist (→P. 275)	Detection distance of the front center sensor	Far	Near	O	–	O
	Detection distance of the front side sensor	Far	Near	O	–	O
	Detection distance of the rear center sensor	Far	Near	O	–	O
	Buzzer volume	3	1 to 5	O	–	O
	Display setting (when intuitive parking assist is operating)	All sensors displayed	Display off	O	–	O
Automatic air conditioning system (→P. 394)	A/C Auto switch operation	On	Off	O	–	O
	Exhaust gas sensor sensitivity	Standard	-3 to 3	O	–	O
	Air conditioning control of Eco drive mode	On	Off	–	–	O

Item	Function	Default setting	Customized setting	①	②	③
Climate control seats ^{*1} /seat heaters ^{*1} (→P. 697)	Front climate control seat/seat heater temperature adjustment during automatic operation (individual seat adjustment available)	Level 3 (standard)	Level 1 (cool) to level 5 (warm)	○	—	○
	Rear climate control seat/rear seat heater start-up conditions when engine switch is in the ON position (individual seat adjustment available)	Off	On (AUTO)	○	—	○
	Function that warms seats faster than usual when heater is at maximum setting (individual seat adjustment available)	On	Off	—	—	○
	Time until function that warms seats faster than usual when heater is at maximum setting turns off (individual seat adjustment available)	Standard	Short	—	—	○
			Long	—	—	○

Item	Function	Default setting	Customized setting	①	②	③
Heated steering wheel*1 (→P. 695)	Automatic steering wheel heating	On	Off	○	–	○
	Time until automatic steering wheel heating turns off	Level 3 (standard)	Level 1 (short) to level 5 (long)	○	–	○
Illumination (→P. 665)	Time elapsed before the interior lights turn off	15 seconds	Off	○	–	○
			7.5 seconds			
			30 seconds			
	Operation after the engine switch is turned off	On	Off	–	–	○

Item	Function	Default setting	Customized setting	①	②	③
Illumination (→P. 665)	Operation when the doors are unlocked	On	Off	–	–	○
	Operation when you approach the vehicle with the electronic key on your person	On	Off	–	–	○
	Footwell and inside door handle lights	On	Off	–	–	○
	Shift lever light	On	Off	–	–	○
	Seat belt buckle illumination when driver's door is opened	On	Off	–	–	○
	Seat belt buckle illumination after the engine switch is turned off	On	Off	–	–	○
	Instrument panel illumination method	Choreographed illumination	Simple illumination	–	–	○
			Off	–	–	○
	Exterior light control	On	Off	–	–	○
	Time elapsed before the outer foot lights turn off	15 seconds	Off	○	–	○
			7.5 seconds			
			30 seconds			
	Operation of the outer foot lights when you approach the vehicle with the electronic key on your person	On	Off	–	–	○
	Operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	–	–	○

Item	Function	Default setting	Customized setting	①	②	③
Seat belt reminder (→P. 809)	Vehicle speed linked seat belt reminder buzzer	On	Off	–	–	○

*1: If equipped

*2: The default setting varies according to countries.

*3: U.S.A. only

■ Vehicle customization

- When the speed-detecting automatic door lock and shift-linked automatic door lock are both on, the door lock operates as follows.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
 - If the vehicle is started with all doors locked, the speed- detecting automatic door lock will not operate.
 - If the vehicle is started with any door unlocked, the speed- detecting automatic door lock will operate.
- When the smart access system with push-button start is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.

■ When customizing using the Remote Touch

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent battery discharge, leave the engine running while customizing the features.

⚠ CAUTION

■ During customization

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**NOTICE****■ During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.

